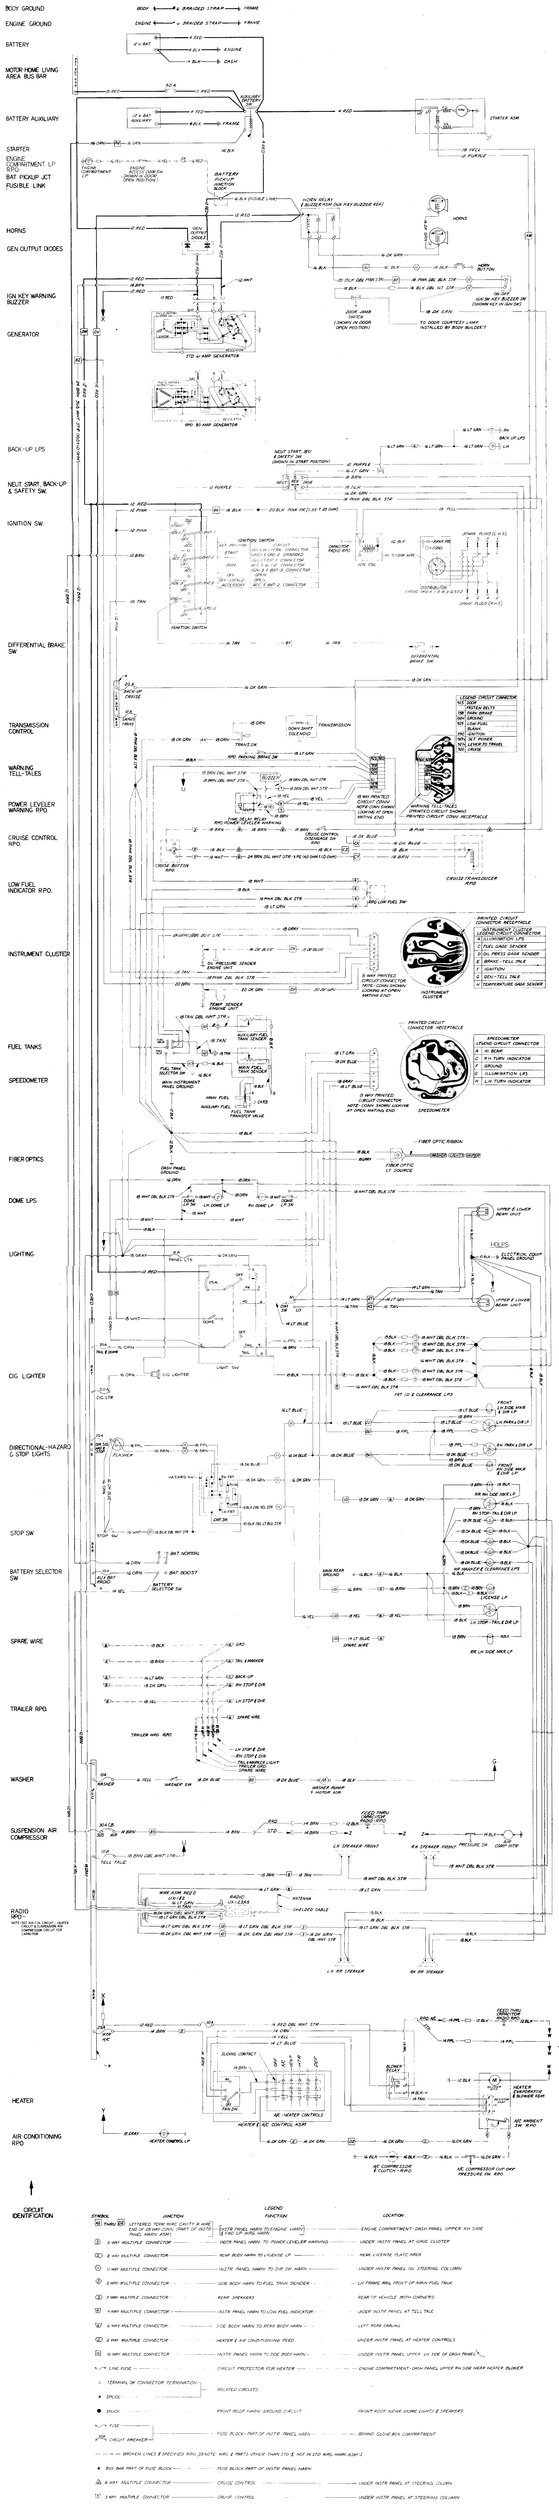
BODY GROUND
ENGINE GROUND
BATTERY
MOTOR HOME LIVING AREA BUS BAR
BATTERY AUXILIARY
STARTER
ENGINE COMPARTMENT LP RPO
BAT PICKUP JCT
FUSIBLE LINK
HORNS
GEN OUTPUT DIODES
IGN KEY WARNING BUZZER
GENERATOR
BACK-UP LPS
NEUT. START, BACK-UP & SAFETY SW.
IGNITION SW.
DIFFERENTIAL BRAKE SW
TRANSMISSION CONTROL
WARNING TELL-TALES
POWER LEVELER WARNING RPO.
CRUISE CONTROL RPO.
LOW FUEL INDICATOR RPO.
INSTRUMENT CLUSTER
FUEL TANKS
SPEEDOMETER
FIBER OPTICS
DOME LPS
LIGHTING
CIG. LIGHTER
DIRECTIONAL-HAZARD & STOP LIGHTS
STOP SW
BATTERY SELECTOR SW
SPARE WIRE
TRAILER RPO.
WASHER
SUSPENSION AIR COMPRESSOR
RADIO RPO.
HEATER
AIR CONDITIONING RPO.
CIRCUIT IDENTIFICATION
LEGEND
SYMBOL
JUNCTION
FUNCTION
LOCATION
ENGINE COMPARTMENT-DASH PANEL UPPER RH SIDE
UNDER INSTR PANEL AT GRAC CLUSTER
REAR LICENSE PLATE AREA
UNDER INSTR PANEL ON STEERING COLUMN
LH FRNT WHL FRONT OF RWH FUEL TANK
REAR OF VEHICLE (WITH CORNERS)
UNDER INSTR PANEL AT TELL TALE
LEFT REAR CARLING
UNDER INSTR PANEL AT HEATER CONTROLS
ENGINE COMPARTMENT-DASH PANEL UPPER RH SIDE NEAR HEATER BLOWER
UNDER INSTR PANEL UPPER LH SIDE OF DASH PANEL
FRONT ROOF NEAR DOME LIGHTS & SPEAKERS
BEHIND GLOVE BOX COMPARTMENT
ENGINE COMPARTMENT-DASH PANEL UPPER RH SIDE
UNDER INSTR PANEL UPPER LH SIDE
ENGINE COMPARTMENT-DASH PANEL UPPER RH SIDE
PART OF HEATER/AIR CONDITIONING UNIT
BUS BAR PART OF FUSE BLOCK
FUSE BLOCK PART OF INSTR PANEL HARN
6 WAY MULTIPLE CONNECTOR
CRUISE CONTROL
UNDER INSTR PANEL AT STEERING COLUMN
3 WAY MULTIPLE CONNECTOR
CRUISE CONTROL
UNDER INSTR PANEL AT STEERING COLUMN
JUNCTION BLOCK (FUSIBLE LINK)
RELATED CIRCUITS
ENGINE COMPARTMENT-DASH PANEL UPPER RH SIDE
SINGLE LINE CONNECTOR
RELATED CIRCUITS
8 WAY MULTIPLE CONNECTOR
INSTR PANEL HARN TO FRONT ROOF HARN
UNDER INSTR PANEL UPPER LH SIDE
LINE CIRCUIT BREAKER
CIRCUIT PROTECTOR FOR LIVING AREA FUSE BLOCK
ENGINE COMPARTMENT-DASH PANEL UPPER RH SIDE
2 WAY MULTIPLE CONNECTOR
AMBIENT SWITCH FOR AIR CONDITIONING
PART OF HEATER/AIR CONDITIONING UNIT